

Tel:+886 3 667-3400 <u>www.flexwave.com.tw</u>


User Guide

1. Product Description

- Series Name
- Outer Dimension (L×W×H): $166\times86\times55$ (±0.5) mm; Weight: 260 g
- PV Module Specification:

Item	Specification		
Open-circuit Voltage *	2.54 (±5%)		
Short-circuit Current *	615 (±5%)		
Max. Power Output*	1,250 (±5%)		
*: Data measured under 1 Sun Condition (1,000 W/m² with AM1.5 spectrum)			

- Drove by Flexwave's optimize-designed power management.
- Polycarbonate-made box with IP67 degree of protection.

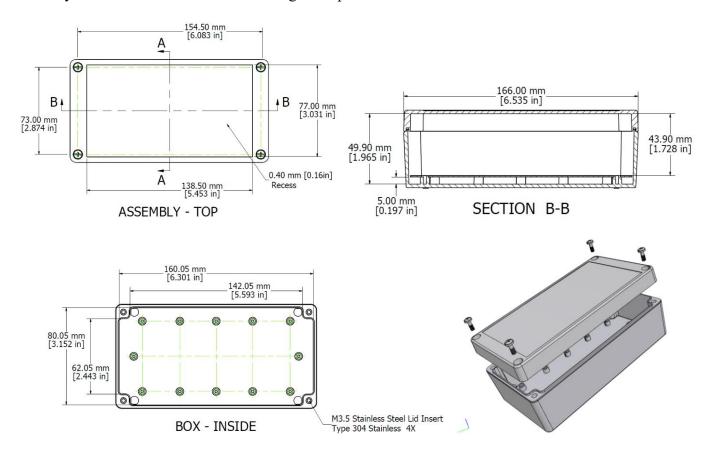




Tel:+886 3 667-3400 <u>www.flexwave.com.tw</u>

2. Installation:

- a. Remove the protect film on surface.
- b. Install fully charged battery before plugging in functional device.
- c. Place Oring into the groove inside of top cover and make sure flat side of Oring face out.
- d. Place washer on 4 corners of housing. Screws top cover and hosing together. Lid Screw Torque: 30 ozf-in (21 cN-m).
- e. Users can drill sizeable holes to fix waterproof joints for alternative applications.

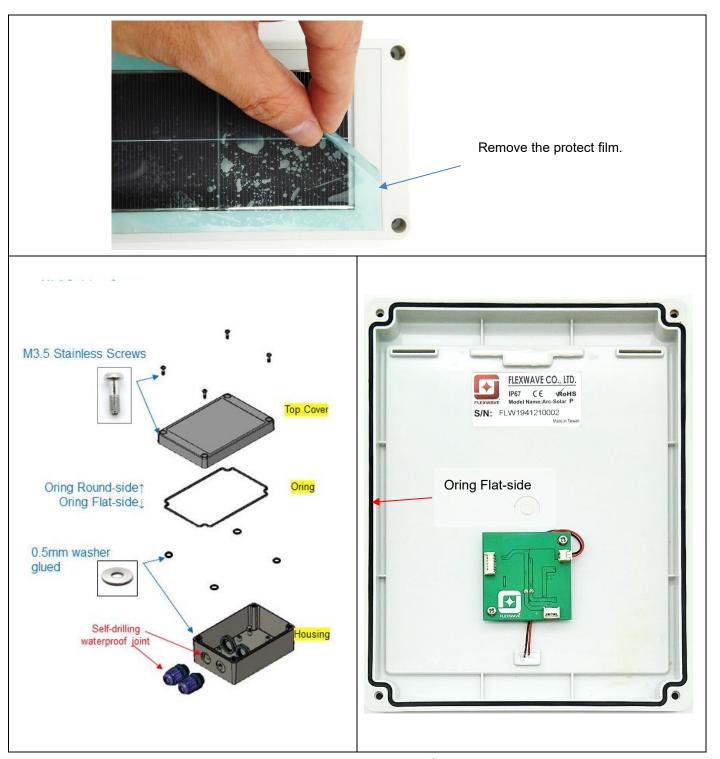


Tel:+886 3 667-3400 <u>www.flexwave.com.tw</u>

3. Function Description

- The charging Voltage of the Max. Power Point Tracking (MPPT) system is 4.2V(maximum).
- Storage device is an essential/ necessary component for maintaining output system stable.
- The floating pin provides battery voltage with a limited current.
- Model type of connectors: Molex / JST pitch 1.25 mm (Female).
- The following picture illustrates the functions of the smart power system.

Connect to your system.

Storage port will provide power for your system.

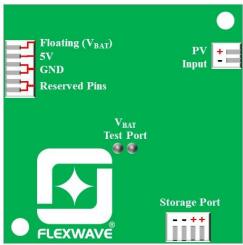

Please make sure storage port is well connected to keep system work stably

The function diagram of Power Management.

Power Manager		Min	TYP	Max	Unit
Charging voltage of storage port				4.2	V
Peak output current of 5V output				900	mA
Quiescent current.	MPPT System		85	120	μΑ
	5V step-up output		100	250	
Accuracy of V _{BAT} , V _{SYS} .		-5		+5	%
Recommended operating ambient condition. (Depends on usage of chargeable batteries)		-10		65	°C

^{*} Must have battery protection board when adopting rechargeable battery.



Tel:+886 3 667-3400 <u>www.flexwave.com.tw</u>

4. Warranty and Maintenance

Please read the following information before using to ensure use products safely/ products safety.



Do not throw Arc-solar box into water.



Do not puncture, crush, throw or drop the box.



Do not use sharp objects to rub against the box, to avoid scratches or damage.



Keep the box way from flammable products and petrochemical oil/gas.

• Clean the surface by ethanol or clean water.

5. Certificates

- IP67 degrees of protection provided by Arc-solar box manufactured by Flexwave are certified by SGS according to IEC 60529 Edition 2.2:2013.
- European Parliament and Council Directive 2011/65/EU on the Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment (RoHS) are certified by BUREAU VERITAS CONSUMER PRODUCTS SERVICES (H.K.) LIMITED, TAIWAN BRANCH.
- CE-EMC are certified by Weishang Certification Co., Ltd.



